

# Annex F

# ACT's overhead protection system



# All you need to know about the FRACO platform

98030617-00 (MU-OVER-AN 10-2004)



## **Table of contents**

Annex F: ACT's overhead protection system installation




# Annex F

#### ACT's overhead protection system installation

#### In this section:

•	General view	<u>l-1</u>	
•	Overhead support assembly		
	<ul> <li>Platform overhead support</li> </ul>	I-2	
	<ul> <li>Elevating unit overhead support</li> </ul>	1-3	
•	Vay to install the overhead support	1-4	
•	support installation		
	<ul> <li>Installation on the platform</li> </ul>	I-5	
	<ul> <li>Installation at the end of the platform</li> </ul>	I-6	
	<ul> <li>Installation on the elevating unit</li> </ul>	I-7	
•	toof installation	I-8	
•	2 <sup>nd</sup> level working area		
	<ul> <li>Outrigger installation</li> </ul>	1-9	
	<ul> <li>Outrigger planks installation</li> </ul>	I-10	
	<ul> <li>Outrigger guardrail installation</li> </ul>	I-11	
	<ul> <li>Outrigger guardrail planks installation</li> </ul>	I-12	
	<ul> <li>Plank end guardrail installation</li> </ul>	I-13	
•	Overhead system tarp installation	I-14	

## **General view**

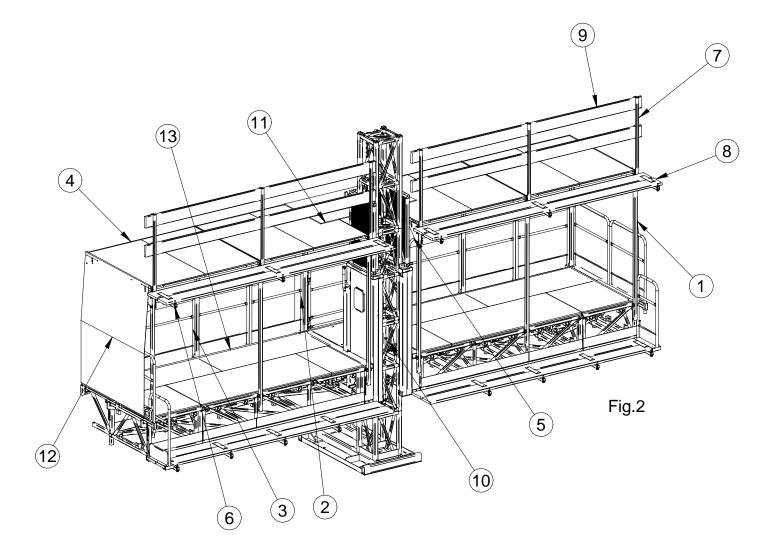


Part identification		
Item #	Description	
1	Front bracket	
2	Rear bracket (elevating unit)	
3	Rear bracket	
4	Roof structure	
5	Top bracket	
6	Outrigger	
7	Outrigger guardrail	
8	Plank	
9	Outrigger guardrail plank	
10	ACT elevating unbit	
11	Plywood	
12	End platform tarp	
13	Platform tarp	

#### **Overhead support assembly**

#### On the platform

#### installation:

1-Install the front support using the right holes in the top support.(Det.1)2-Installa the rear support using the right holes in the top support. (Det.2)3-Lock the front & rear part using locking pin with safety pin. (Det 1 & Det. 2)

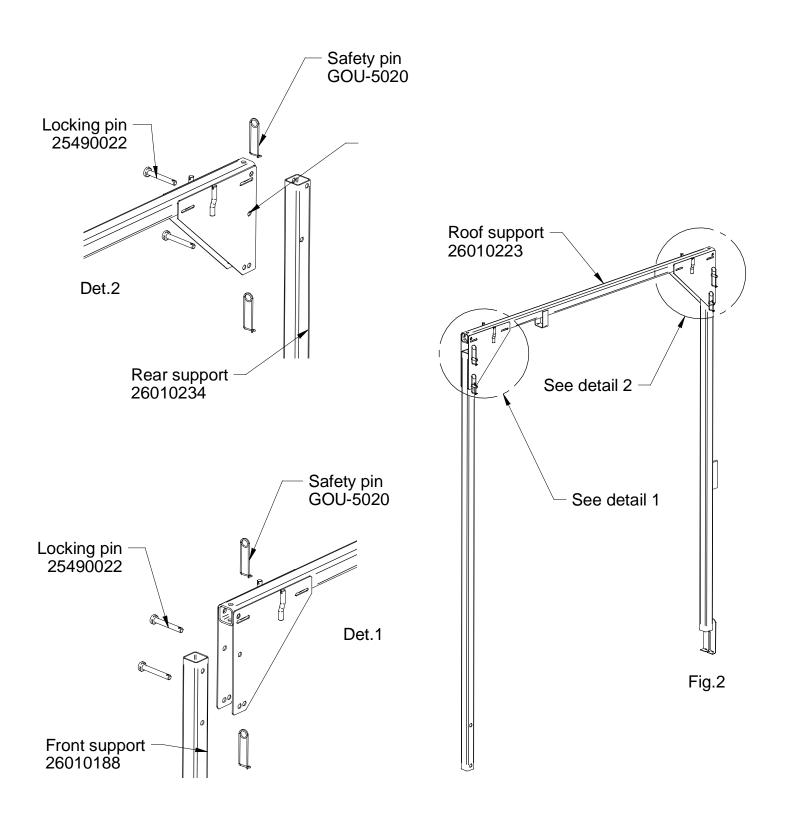


#### **Overhead support assembly**

Installation on the elevating unit

#### Installation:

1-Install the front support using the right holes in the top support.(Det.3) 2-Installa the rear support using the right holes in the top support. (Det.4) 3-Lock the front & rear part using locking pin with safety pin. (Det 3 & Det. 4)

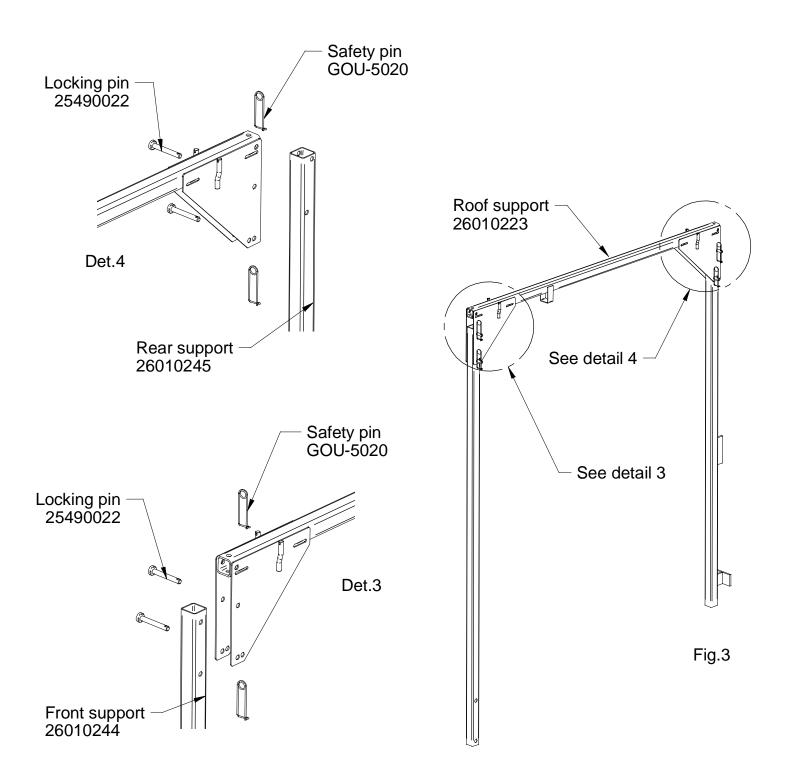

### Way to install the overhead protection


#### Installation:

#### Horizontal roof

1-Use the holes as shown on the front support (Det.6) and the holes on the rear support (Det.5) to set up the roof horizontally.


#### Angle roof

2-Use the holes as shown on the front support (Det.6) and the holes on the rear support (Det.5) to set up an angle roof.

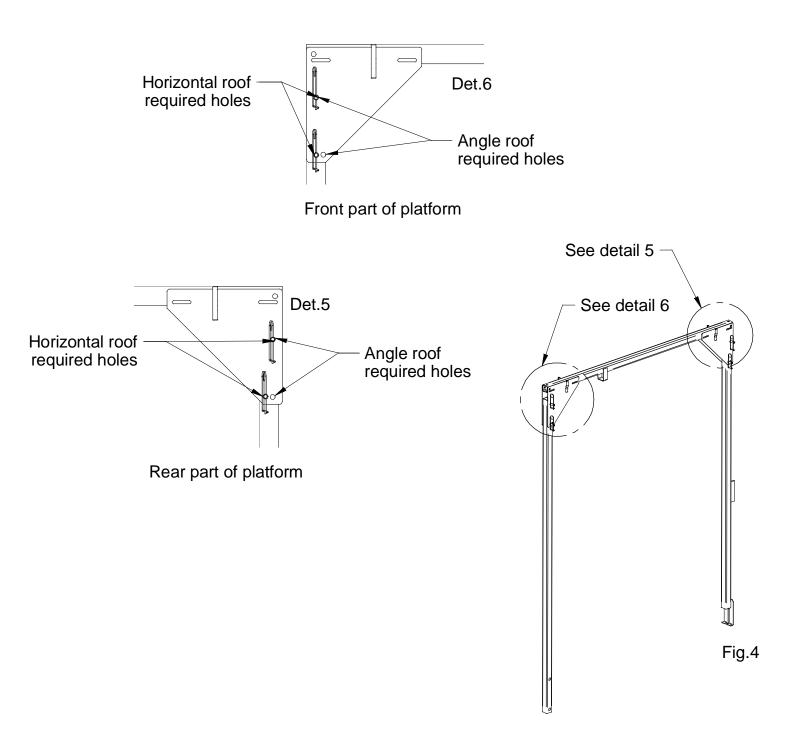


### **Bracket installation**

Middle of platform

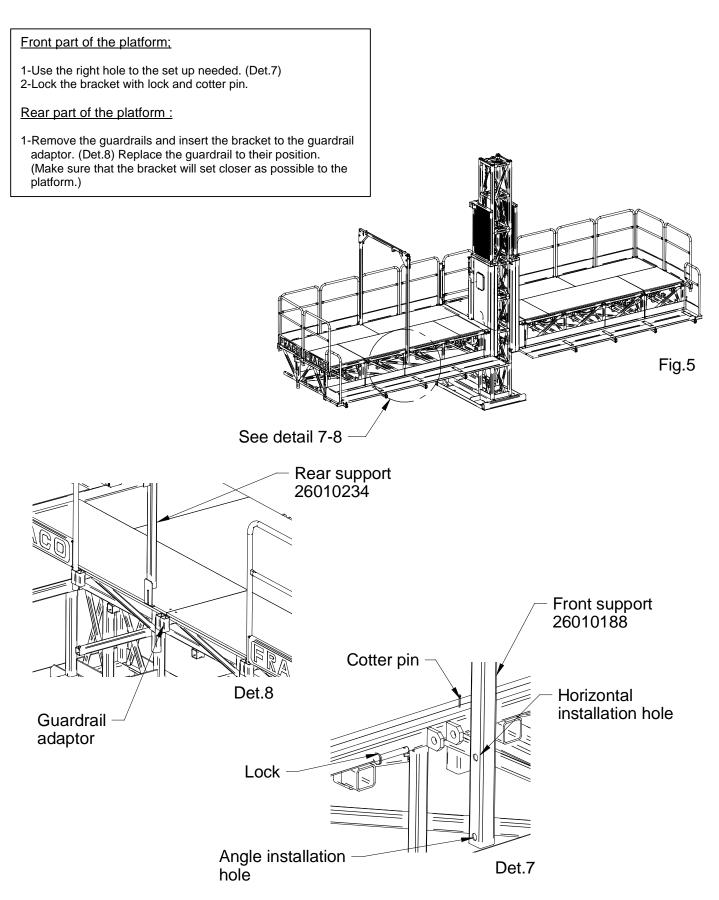

# Bracket installation




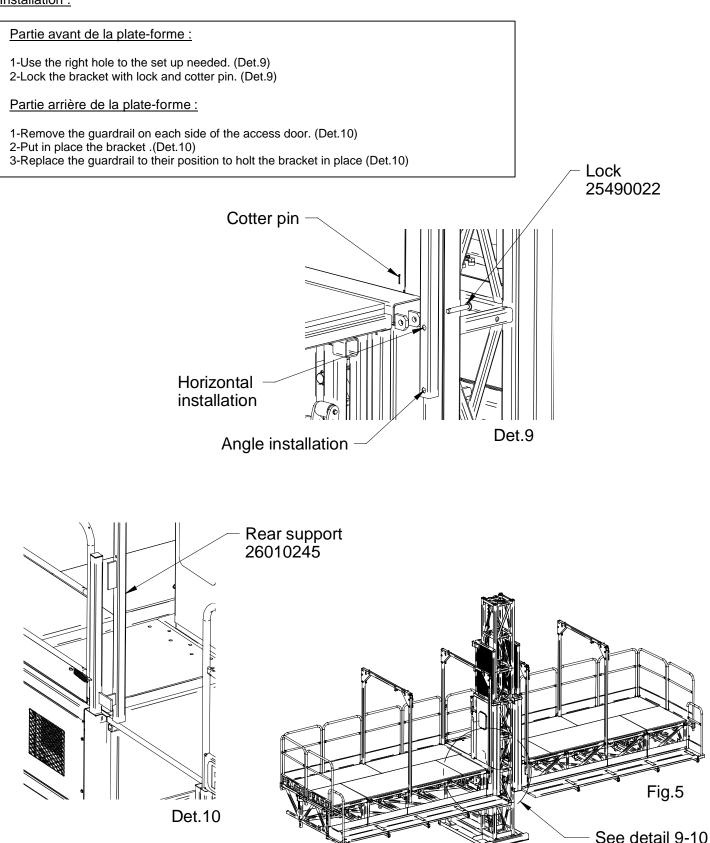

### **Bracket installation**


End of platform


Remove the corner guardrail. (Det.11)
 Insert a guardrail adaptor. (Det.11)
 Lock the adaptor using a safety lock. (Det.11)
 Replace the guardrail..

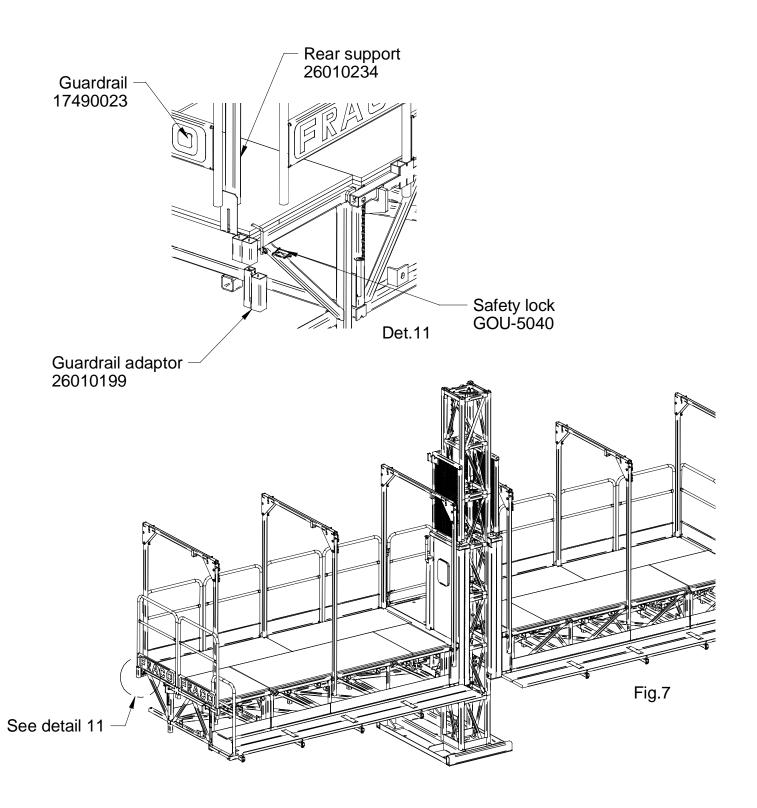

## **Roof installation**


1-Install the roof on the welded axle on roof support. (Det.13) 2-Lock it using safety pin.

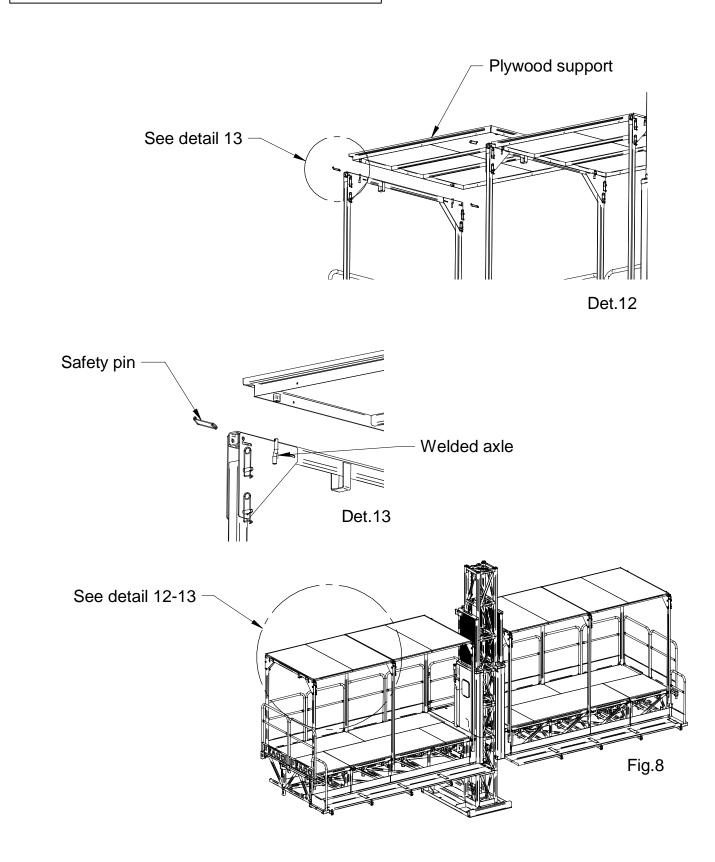

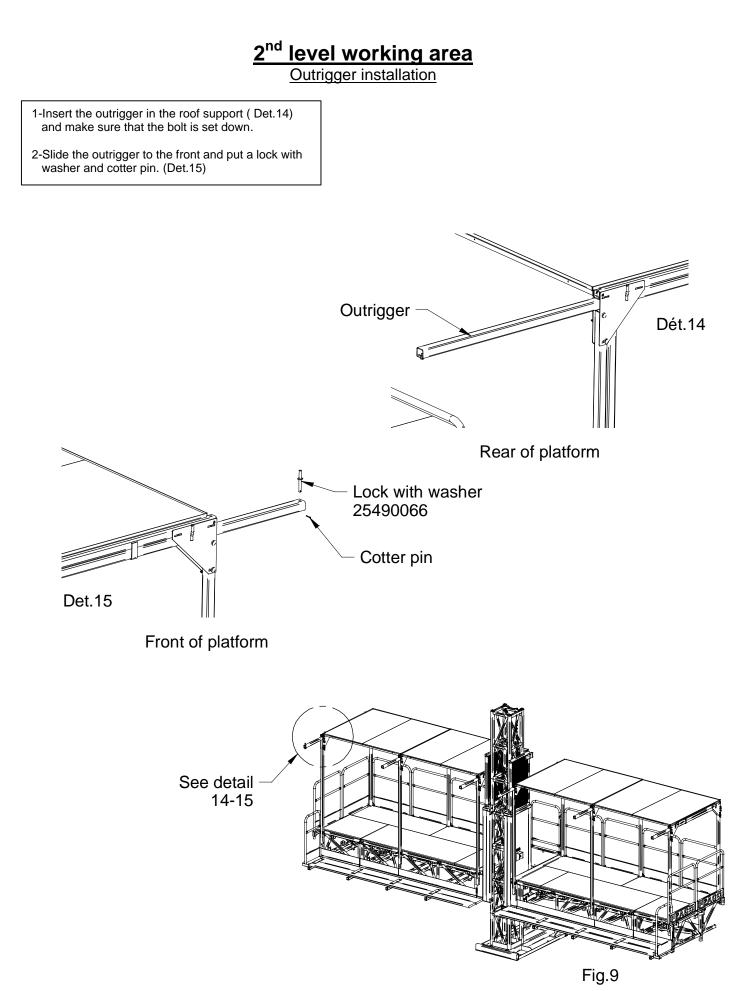


#### 2<sup>nd</sup> nd level working area Outrigger plank installation

1-Install the outrigger planks and lock them using outrigger tie. (Det.16) 2-Use nail or screw to hold the outrigger tie. (Det.17)

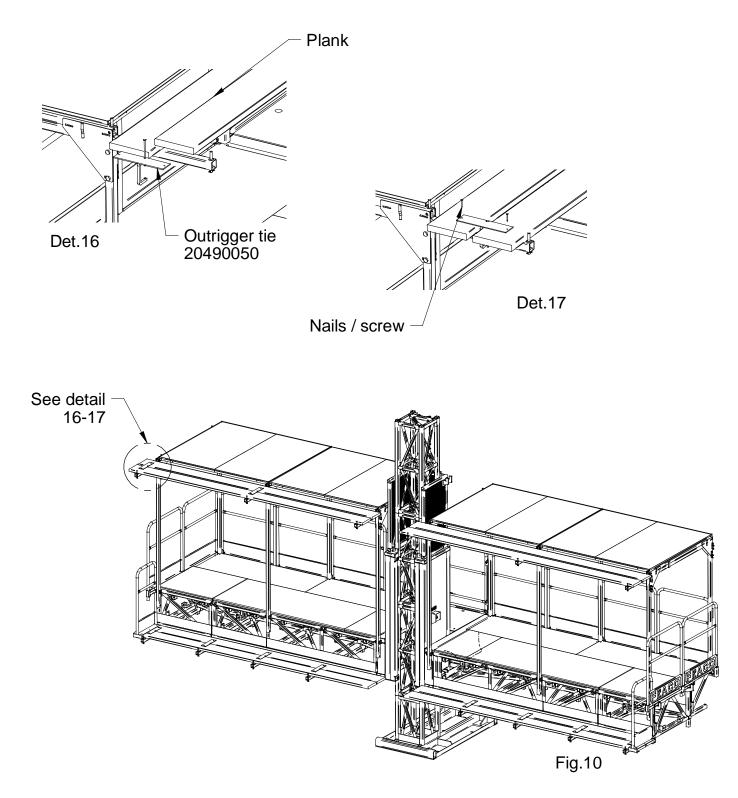






1-Insert the guardrail in the top support. (Det.18)2-Lock the guardrail using lock with washer. (Det.18)

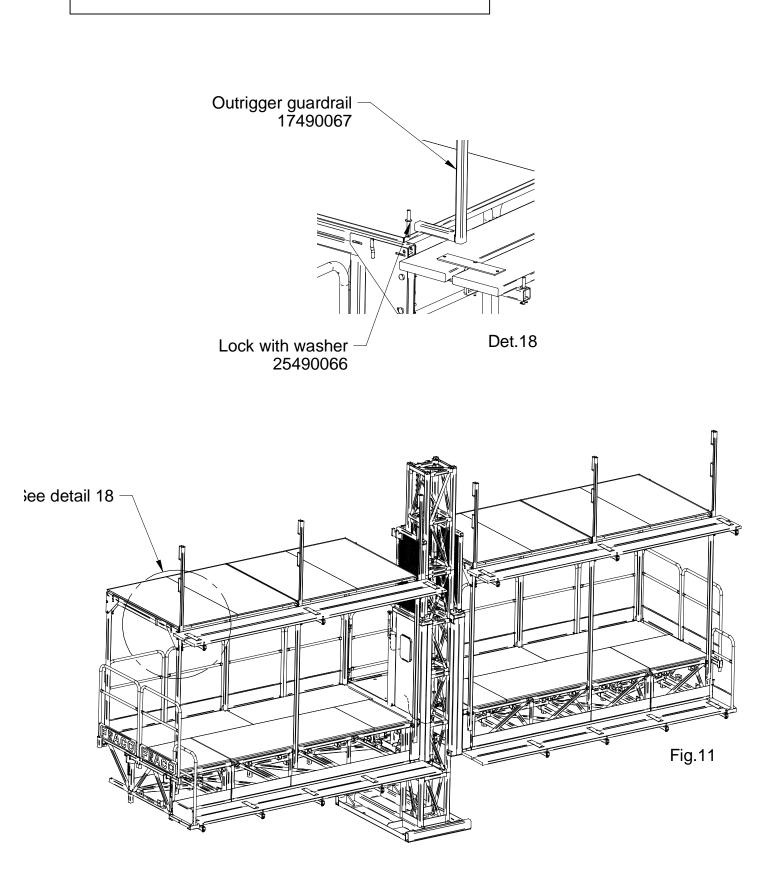

# 2<sup>nd</sup> level working area Outrigger guardrail plank installation

 


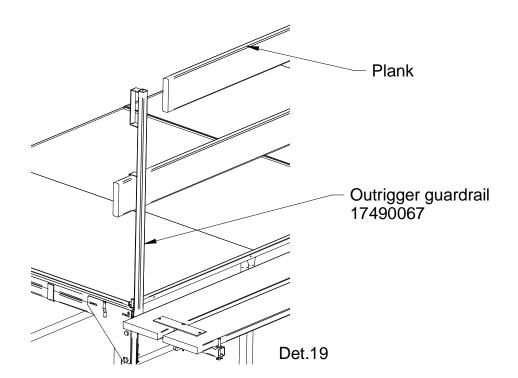

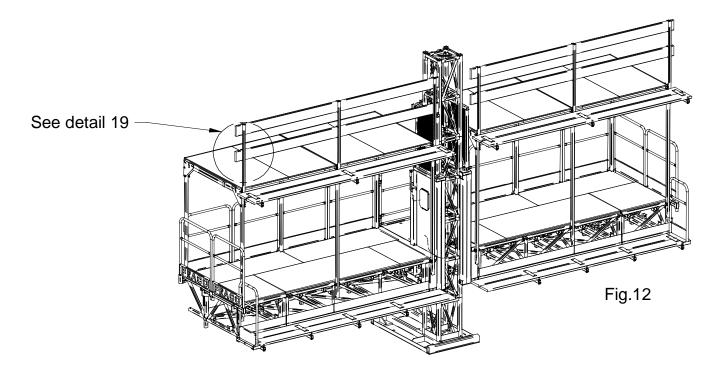

# 2<sup>nd</sup> level working area Plank end guardrail installation

1-Insert the plank end guardrail on the planks. (Det.20)2-Use nails or screw to hold the guardrail.

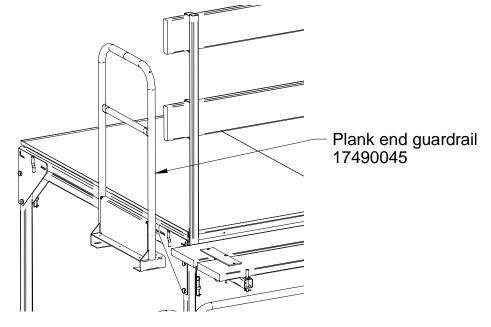

Det.20

